

VCDS-08-Auto HVAC

- Remember Last Recirculation Setting

Remember Last Recirculation Setting

1. [Select]
2. [08 - Auto HVAC]
3. [Adaption - 10]
4. IDE01476-Store recirculation air setting for terminal 15 off
5. Select new value - save
6. [Do It!]

The screenshot shows the VCDS (VAG COM Diagnostic System) interface, Release 20.4.0, with the '08-Auto HVAC, UDS Adaptation' module selected. The 'Channel (1B)' dropdown menu is set to 'IDE01476-Store recirculation air setting for terminal 15 off'. The 'Stored value' field displays 'According to country version'. The 'New value' dropdown menu is open, showing three options: 'According to country version', 'save', and 'Do not store'. A mouse cursor is hovering over the 'According to country version' option. At the bottom of the interface, there are four buttons: 'Soft reset' (with an unchecked checkbox), 'Do It!', 'Go Back', and 'Add to Log'.

VCDS Release 20.4.0: 08-Auto HVAC, UDS Adaptation

Channel (1B)
IDE01476-Store recirculation air setting for terminal 15 off

Stored value
According to country version

Search
Clear

New value
According to country version
save
Do not store

☐ Soft reset Do It! Go Back Add to Log