

VCDS-08-Auto HVAC

- [Remember Last Recirculation Setting](#)

Remember Last Recirculation Setting

1. [Select]
2. [08 - Auto HVAC]
3. [Adaption - 10]
4. IDE01476-Store recirculation air setting for terminal 15 off
5. Select new value - save
6. [Do It!]

