

VCDS-08-Auto HVAC

- Remember Last Recirculation Setting

Remember Last Recirculation Setting

1. [Select]
2. [08 - Auto HVAC]
3. [Adaption - 10]
4. IDE01476-Store recirculation air setting for terminal 15 off
5. Select new value - save
6. [Do It!]

VCDS Release 20.4.0: 08-Auto HVAC, UDS Adaptation

Channel (1B)

IDE01476-Store recirculation air setting for terminal 15 off

Stored value

According to country version

Search

Clear

New value

According to country version

save

Do not store

☐ Soft reset

Do It!

Go Back

Add to Log