


Remember Last Recirculation Setting

1. [Select]
2. [08 - Auto HVAC]
3. [Adaption - 10]
4. IDE01476-Store recirculation air setting for terminal 15 off
5. Select new value - save
6. [Do It!]

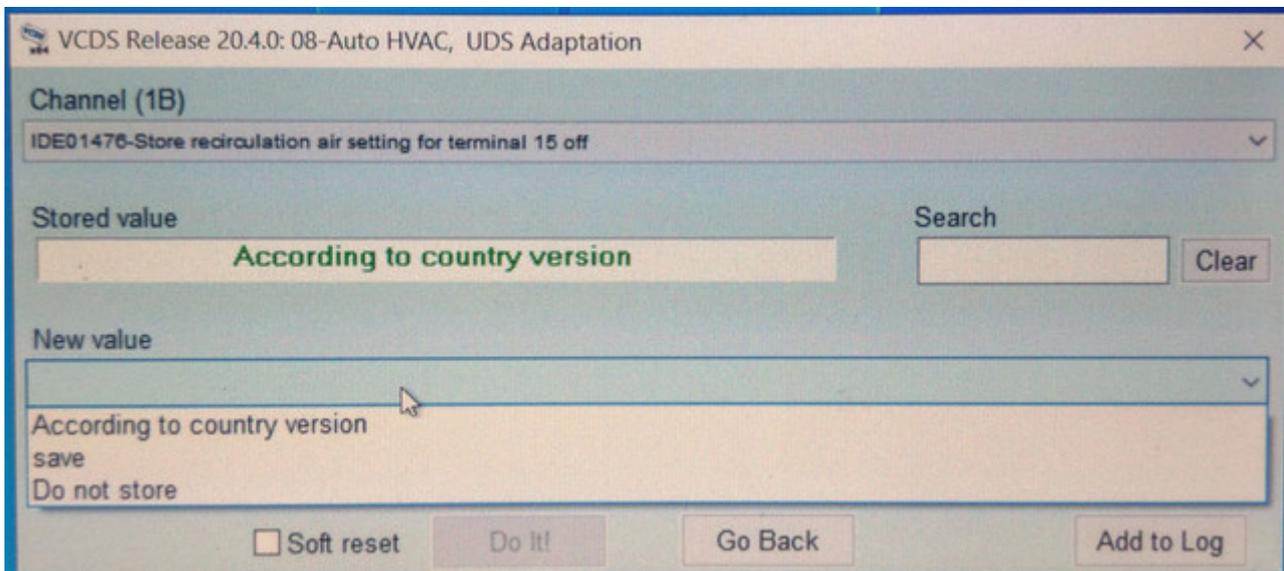

Revision #1

Created 2 March 2024 22:46:50 by Akakios

Updated 6 June 2024 03:28:52 by Akakios