


Remember Last Recirculation Setting

1. [Select]
2. [08 - Auto HVAC]
3. [Adaption - 10]
4. IDE01476-Store recirculation air setting for terminal 15 off
5. Select new value - save
6. [Do It!]

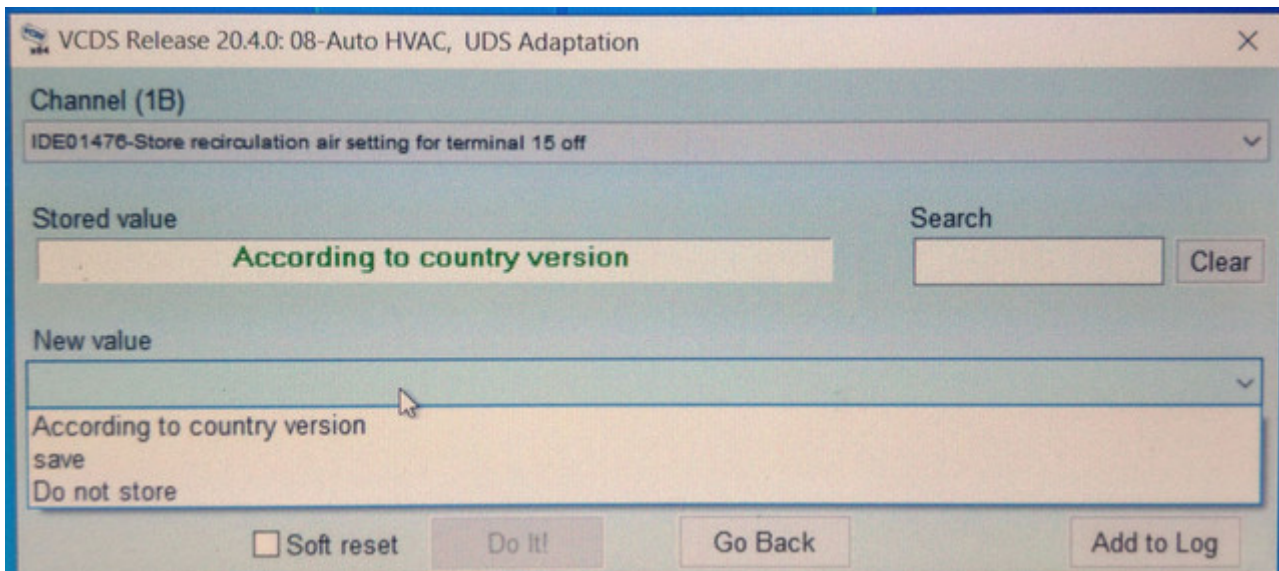

The screenshot shows the VCDS Release 20.4.0: 08-Auto HVAC, UDS Adaptation window. The 'Channel (1B)' dropdown is set to 'IDE01476-Store recirculation air setting for terminal 15 off'. The 'Stored value' field displays 'According to country version'. The 'New value' dropdown is open, showing 'According to country version', 'save', and 'Do not store'. The 'Search' field is empty, and the 'Clear' button is visible. At the bottom, there is a 'Soft reset' checkbox, and buttons for 'Do It!', 'Go Back', and 'Add to Log'.

Revision #1

Created 2 March 2024 22:46:50 by Akakios

Updated 6 June 2024 03:28:52 by Akakios