

# Auto Distance Regulation


[13 - **Auto** Distance Regulation]

[Adaptation - 10]

Select channel 1B

Find "Distance basic setting option"

Change from OFF to ON

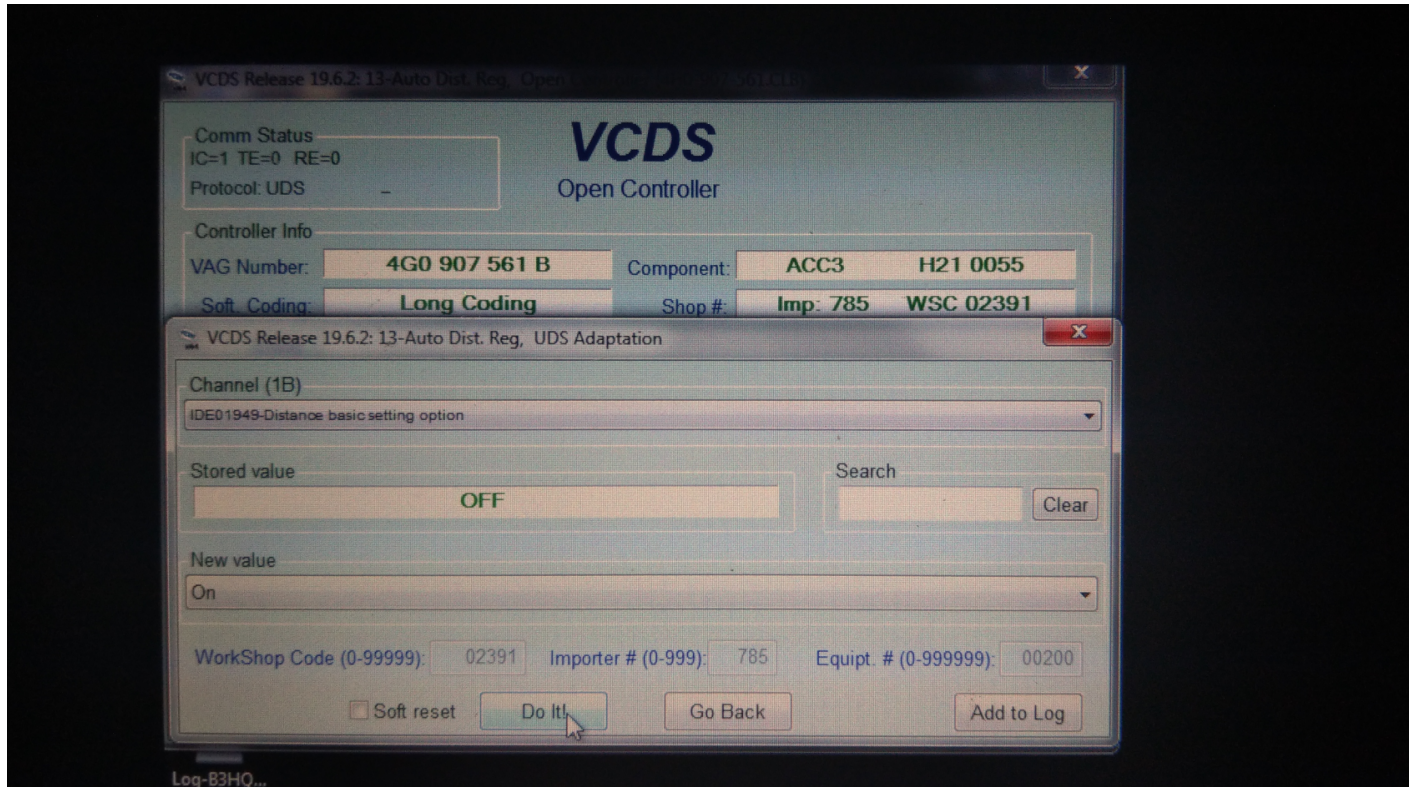

Revision #1

Created 2 March 2024 22:12:05 by Akakios

Updated 6 June 2024 03:28:53 by Akakios