

# Rear Zone - Vent Flap / Low Air Flow

If you're experiencing strong air flow out one side of the vehicle but low flow on the other side despite what the rear controls say, you'll want to investigate your flaps.

1. Remove vents (2 x hooks)
2. Disconnect cables
3. Pull rear console cover towards you.
4. Remove inner upper vent by pulling it towards you
5. Remove connector off the bottom of that one
6. Swap in the replacement unit and/or replace the motors on the side of the unit.

[https://www.youtube.com/embed/w3Rn-1\\_Ja8I?si=RWGE84S3BbFws0uR](https://www.youtube.com/embed/w3Rn-1_Ja8I?si=RWGE84S3BbFws0uR)

---

Revision #1

Created 11 June 2024 21:48:23 by Akakios

Updated 12 June 2024 02:05:30 by Akakios